## Nastavenie IP adresy na tlačiarni

- 1. Otvoríme aplikáciu Printer Test.
- 2. Tlačiareň máme pripojenú cez USB kábel a v aplikácii zvolíme POS80

2		Printer TE	ST V3.0C	×
Port Select	COM OUSB	ONET	Printer Type O POS-58	POS-76
LPT Set	COM Set	9600	v RTS	
NET Set				
Local IP:	192 . 168 . 0	) . 194	Refresh	
Printer IP:	192 . 168 . 5	5 . <mark>3</mark> 9	Connect	Ping
New IP:	192 . 168 . 1	. 100	Set New IP	NetMonitor
New ID:	0.0.0	).0	New ID	(Set last four ID)
Content	Rep: 1	HEX Clear	AutoSend Cyc	500 ms □CutPaper
Welcome to use POS receipt print	the impact and therma ter company!	l printer manufa	ctured by professional	Print
				CutPaper
				Open cash drawer
				Traditional
				Driver Print
				Advanced
	中文简体			
P 0 S				Copyright(C) JS
Status Bar: Real-t	ime display of print sta	tus!		

3. Do kolonky New IP, zadáme IP adresu, ktorú chceme na tlačiarni nastaviť, a klikneme na tlačidlo Set New IP

			Printer 7	EST V3.0C		
Port Select	Осом	● USB	ONET	Printer Type OPOS-58	OPOS-76	POS-80
LPT Set	COM	Set				
LPT1	CON	v11 v	9600	Y RT	S	v.
NET Set						
Local IP:	192	. 168 . 0	) . 194	Refresh		
Printer IP:	192	. 168 . 5	5 . 39	Connect		Ping
New IP:	192	. 168 . 1	I . 55	Set New IP		NetMonitor
New ID:	0	· <b>^</b> °	).0	New ID	(Set	ast four ID)
Content:	Rep: 1		HEX Clear	AutoSend C	Cyc 500	ms □CutPaper
Welcome to u POS receipt p	use the impai printer compa	ct and therma any!	l printer manu	factured by professio	onal ^	Print
					_	
						Cut Paper
						Cut Paper Open cash drawer
						Cut Paper Open cash drawer Traditional
						Cut Paper Open cash drawer Traditional Driver Print
						Cut Paper Open cash drawer Traditional Driver Print Advanced
	DOS			ST 1/2 0C		Cut Paper Open cash drawer Traditional Driver Print Advanced 中文简体
POS	POS	PRINT	FER TE	ST V3.0C	Copyrig	Cut Paper Open cash drawer Traditional Driver Print Advanced 中文简体

IP adresa tlačiarne je týmto krokom nastavená. Vieme ju skontrolovať vytlačením Self testu tlačiarne kde je vidieť nová nastavená IP adresa.