## Nastavenie zvukovej signalizácie po vytlačení dokladu XP-S260M

- 1. Otvoríme aplikáciu Printer Test V.3.1
- 2. Klikneme na POS-80 (po kliknutí na Print by nám tlačiareň mala vytlačiť text na doklade ak komunikuje s PC) a potom klikneme na Advanced

Printer test V3.1						
PortSelect OLPT O	COM OUSB	ONET	Printer Type O POS-58	OPOS-76	POS-80	
LPT Settings	COM Settings					
LPT1 ~	COM7	~ 19200	~ RT	s v		
NET Set						
Local IP:	192 . 168 .	0 . 194	Refresh	Auto Set Ip		
Printer IP:	192 . 168 .	11 . 101	Connect	Ping		
New IP:	192 . 168 .	1 . 100	Set New IP	NetMonitor		
New ID:	0.0.	0.0	New ID	(Set last four ID	))	
receipt printer com	ipany!				Cut Paper Open cash draw	
					Traditional	
					Driver Print	
					Advanced	
					中文简体	
POS	POS printer	test tool V	3.1	2	023-02-09 13:23:49	
Status Bar: Real-ti	me display of print s	tatus!				

3. Nastavíme Cut with Beep na ON a klikneme na tlačidlo Cut with Beep set.

		Advanced		×
H Parameter Settings:	Print H	Set Delta	5 v	
Code page Settings:	PrintCodePage	SetCodePage	0	
NV Logo Test	NV Download (10	: 70) NV Downl	oad (1d 28)	
Barcode Printing test	Print BarCode	UPC_A v	129 🗸	Height
P76 Buzzer Settings:	Set Buzzer	OFF v		
P76 Density Settings:	Set	NORMAL ~		
P80 Black sens:	Set Sensitivity	12 ×	12 ~	SensH
baud rate settings:	Set BaudRate	19200 🗸	(Only P58 and P76E)	
DIP Settings:	Set P58 DIP	Set P80 DIP	Set P76 DIP	
2D Barcode test	Print 2D Barco	de		
Net Settings:	Set Net	Set Bluetooth		
USB MODE Settings:	USB Printing	Virtual COM		
Black Mark Settings:	Set 80 BlackMark	Set 76 BlackMark		
File data send	Open File ser	nd	1	
Cut With Beep	Cut With Beep Set	ON 🗸		
Input Box Code	1250 - Central Europe	an(Windows)	✓ 设置	

Po úspešnom nastavení tlačiareň pípne. Po vytlačení Self-testu tlačiarne sa na self teste nachádza položka Cutter with Alarm : Yes.